

Quick Start Guide

Outdoor Pan/Tilt Security
Wi-Fi Camera

7100001876 REV1.1.0

*Images may differ from actual products.

1 Set Up Your Camera

STEP 1

DOWNLOAD APP

Get the **MERCUSYS** app from the App Store or Google Play, and log in.



STEP 2

POWER UP

Plug in the adapter to power up your camera.



STEP 3

SET UP

Tap +, select **Add Camera**, then choose your model in the app. Follow the in-app instructions to complete setup.



2 Mount Your Camera





The camera is **not waterproof** when set on a table or shelf. Mount the camera via **Option 1~3** when installing outdoors.

Option 1: Wall Mount


1. Prepare for Mounting

 - 1) Route the camera power cord through the opening of the bracket.
- 2) Stuff the waterproof foam gasket into the bracket.

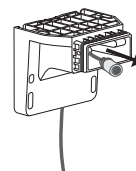


2. Mount the Bracket

 - 1) Stick the mounting template to the desired mounting place. Drill **four** screw holes according to the template.





- 2) Insert four mounting anchors into the holes, then use the mounting screws to affix the bracket over the anchors.

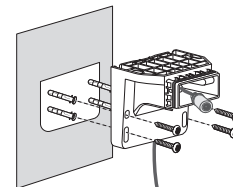

3. Mount the Camera to the Bracket



- 1) Connect the power cord to the camera. Attach the camera to the mounting bracket.
- 2) Use two bracket screws to affix the bracket and the camera.

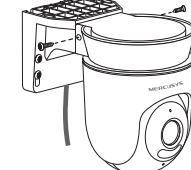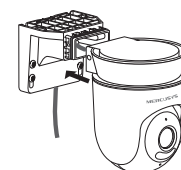

Option 2: Overhang Mount


1. Prepare for Mounting

 - 1) Route the camera power cord through the opening of the bracket.
- 2) Stuff the waterproof foam gasket into the bracket.

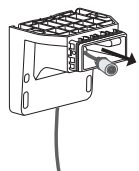


2. Mount the Bracket

 - 1) Stick the mounting template to the desired mounting place. Drill **two** screw holes according to the template.




- 2) Insert two mounting anchors into the holes, then use the mounting screws to affix the camera and bracket over the anchors.

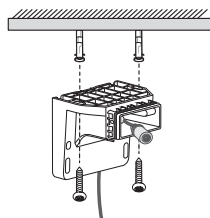

3. Mount the Camera to the Bracket



- 1) Connect the power cord to the camera. Attach the camera to the mounting bracket.
- 2) Use two bracket screws to affix the bracket and the camera.

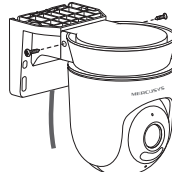

Option 3: Pole Mount


1. Prepare for Mounting

 - 1) Route the camera power cord through the opening of the bracket.
- 2) Stuff the waterproof foam gasket into the bracket.

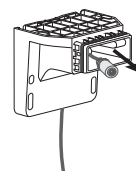


2. Mount the Bracket

Mount the bracket on the pole using one pole-mounting loop* (loop width ≤ 12mm).

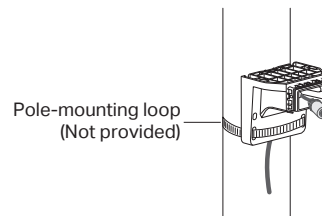


3. Mount the Camera to the Bracket


- 1) Connect the power cord to the camera. Attach the camera to the mounting bracket.

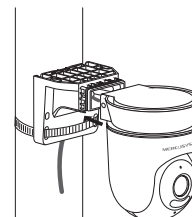

- 2) Use two bracket screws to affix the bracket and the camera.

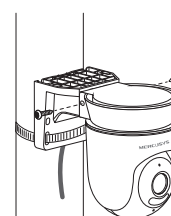

Appearance

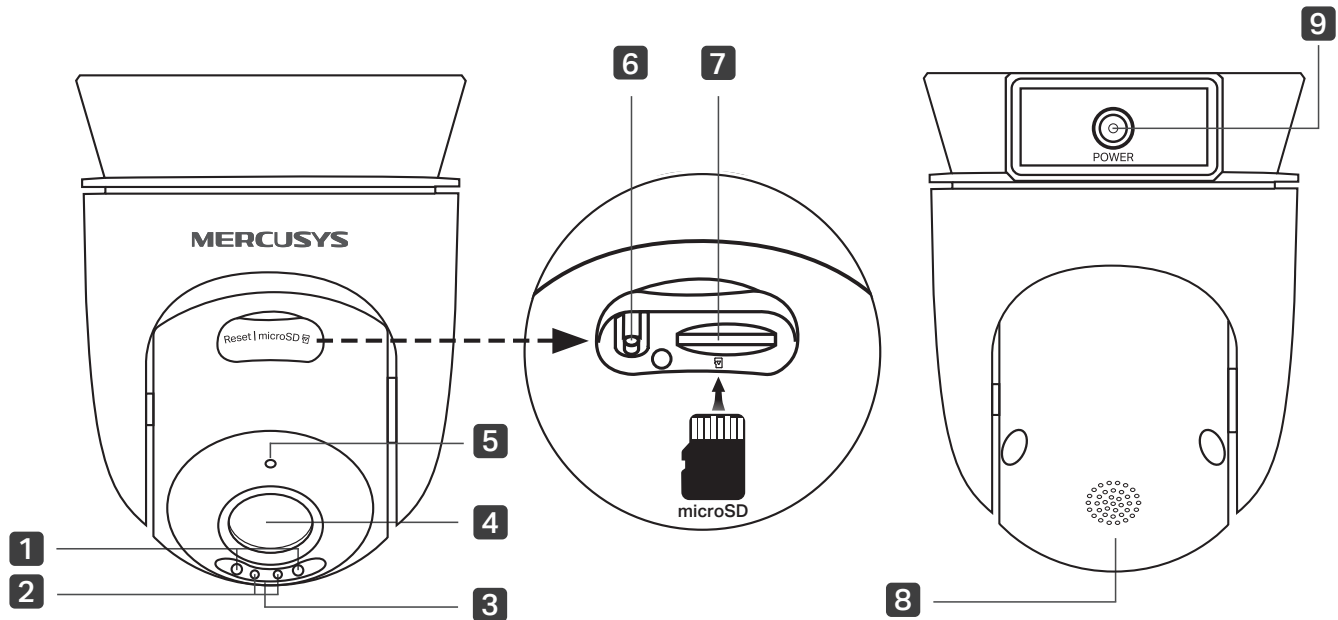

- 1 White Light LEDs
- 2 IR LEDs
- 3 Microphone
- 4 Lens
- 5 System LED
- 6 Reset
- 7 microSD Card Slot
- 8 Speaker
- 9 DC Power Connector

System LED Indication

Solid red	Starting up
Blinking red and green	Ready for setup
Blinking red slowly	Connecting to Wi-Fi
Solid amber	Connected to Wi-Fi
Solid green	Connected to the cloud
Blinking red quickly	Camera resetting
Blinking green quickly	Camera updating

Reset Button

Open the silicone cover. While the camera is powered on, press and hold the RESET button to reset the camera.

- Press and hold for 5s: Reset Wi-Fi settings only
- Press and hold for 10s: Reset to factory settings

microSD Card Slot

Open the silicone cover and insert a microSD card (not included). Initialize it on the MERCUSYS app for local recording.

Safety Information

- Use only power supplies listed in the user instructions. Refer to the User Manual on the product support page.
- Do not use damaged charger or USB cable to charge the device.
- Do not use any other chargers than those recommended.
- Do not use the device where wireless devices are not allowed.
- Adapter shall be easily accessible.
- Use only power supplies which are provided by manufacturer and in the original packing of this product. If you have any questions, please don't hesitate to contact us.
- Keep the device away from fire or hot environments. DO NOT immerse in water or any other liquid.
- Do not disassemble, repair or modify the product.
- Do not use the product if the casing has been broken. Danger of electric shock.
- Never touch the product with wet hands.
- Do not place near automatically controlled devices such as fire alarms. Radio waves emitted from this product may cause such devices to malfunction resulting in an accident.
- Observe restrictions on using wireless products in fuel depots, chemical plants or when blasting operations are in progress.
- Do not use liquid to clean the product. Only use a dry cloth.
- Never put metal objects inside the product. If a metal object enters the product turn off the circuit breaker and contact an authorised electrician.
- This product is not intended to be used when providing medical care. Consult the manufacturer of any personal medical devices, such as pacemakers or hearing aids to determine if they are adequately shielded from external RF (radio frequency) energy.
- Do not use this product in health care facilities. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.
- Do not place heavy objects on top of the product.
- When you leave the product unused for a long time unplug the product from the power outlet.
- This product may interfere with other electronic products such as TV, radios, personal computers, phones or other wireless devices.
- Adapter should be used indoors where the ambient temperature is lower than or equal to 40 °C.
- Operating Temperature: -20 °C ~ 50 °C (-4 °F ~ 122 °F)

Please read and follow the above safety information when operating the device. We cannot guarantee that no accidents or damage will occur due to improper use of the device. Please use this product with care and operate at your own risk.

MERCUSYS hereby declares that the security wi-fi camera is in compliance with the essential requirements and other relevant provisions of directives 2014/53/EU, 2009/125/EC, 2011/65/EU and (EU)2015/863. The original EU Declaration of Conformity may be found at <https://www.mercusys.com/ce>

MERCUSYS hereby declares that the security wi-fi camera is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Regulations 2017. The original UK Declaration of Conformity may be found at <https://www.mercusys.com/support/ukca/>



For technical support, the user guide, warranty, and more information, please visit www.mercusys.com/support/

