


1 | Power On

Plug the extender into a power outlet near your router, and the Signal LED turns solid red.

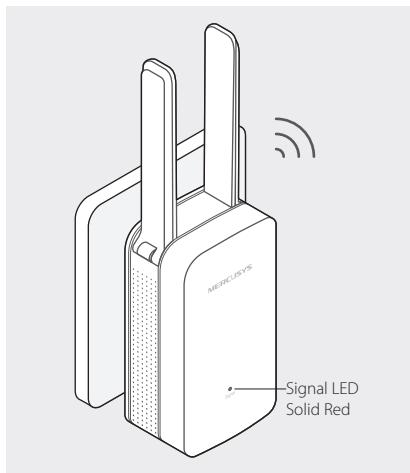


2 | Configure

- 1 Connect your smart device to the extender's wireless network **MERCUSYS_RE_XXXX**.




Note:
The default SSID (network name) is printed on the product label at the back of the extender.


- 2 Launch a web browser and type **mwlogin.net** in the address bar. Create a login password when prompted.

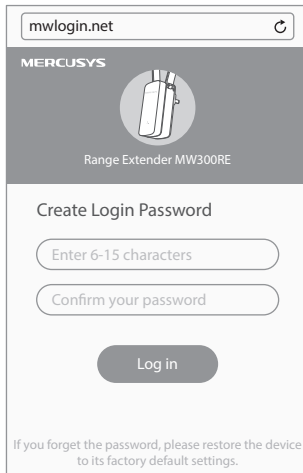


- 3 Select your host network (the router's network). Here we use MERCUSYS_abcd for demonstration.

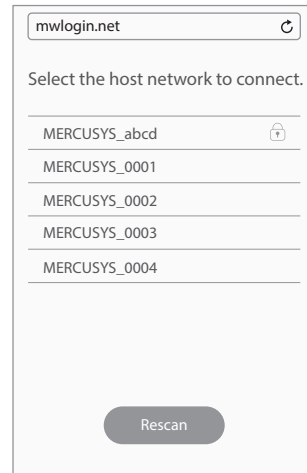

- 4 Enter the password of your host network when prompted.

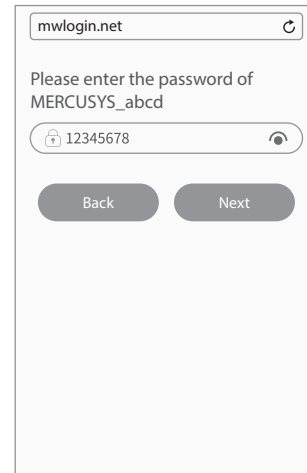


- 5 When your extender is connected to your router successfully, you will see the management page and the Signal LED on your extender turns solid green or orange.

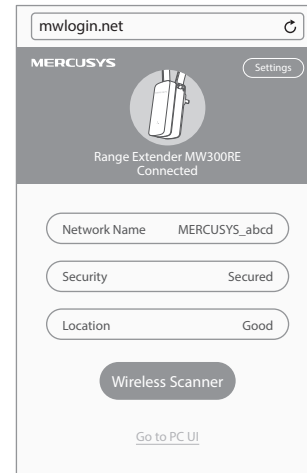


3 | Relocate

- 1 Plug the extender into a power outlet halfway between your router and the Wi-Fi dead zone. Wait until the Signal LED is lit and solid green.

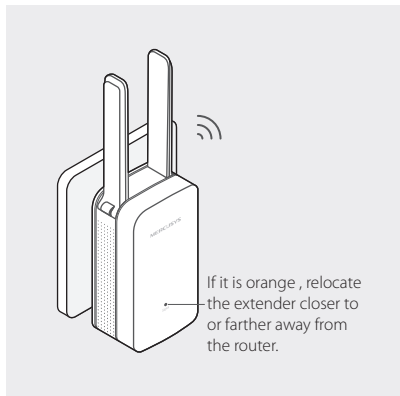


- Note:**
1. The location you choose must be within the range of your host network.
 2. Choose a location away from Bluetooth devices and other household electronics, such as cordless phone, microwave, refrigerator, etc., to minimize signal interference.

- 2 It is recommended to upright the antennas to optimize performance.

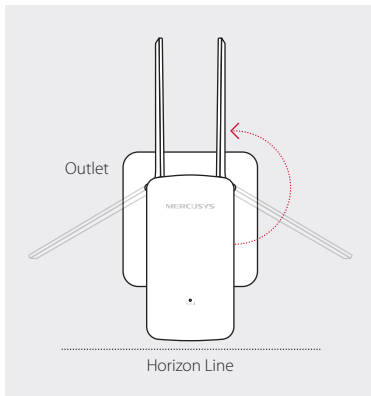

4 | Enjoy

The extended network uses the same network name and password as your host network.

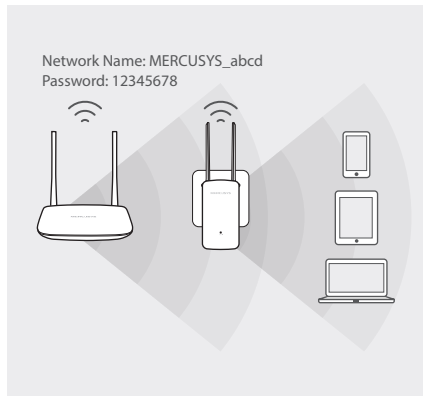


- Note:**
- If you want to change the extended network name, log in to the extender's web management page, go to **Settings>Extended Network Name** to modify the name.

FAQ (Frequently Asked Questions)

How do I configure the extender using WPS?

1. Plug the extender into a power outlet near your router, and the LED turns solid red.
2. Press the WPS/QSS button on your router.
3. Within 2 minutes, press the WPS button on the extender. The LED should change from blinking to a solid state, indicating a successful WPS connection.

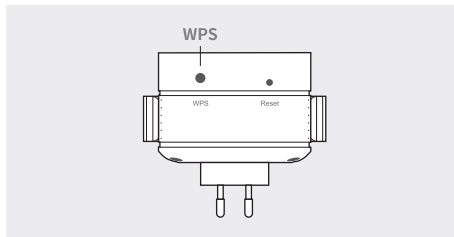

How do I restore the extender to its factory default settings?

- With the extender powered on, use a pin to press and hold the Reset button for at least 5 seconds until the Signal LED starts blinking quickly, then release the button.

What should I do if I cannot access the extender's web management page?

- Make sure that you have connected to the extender's SSID.
- If you are using a computer, make sure it is set to obtain an IP address and DNS server address automatically.

LED Explanation

Blinking Red	The extender is connecting to the router.
Solid Red	The extender is not connected to the router.
Solid Green	The extender is connected to the router and works well.
Solid Orange	The extender is connected to the router, but is too close to or far away from the router.